


NOTES:

1. IN UNPAVED AREAS A CONCRETE WORK PAD SHALL BE PLACED IN FRONT OF THE CABINET DOOR.

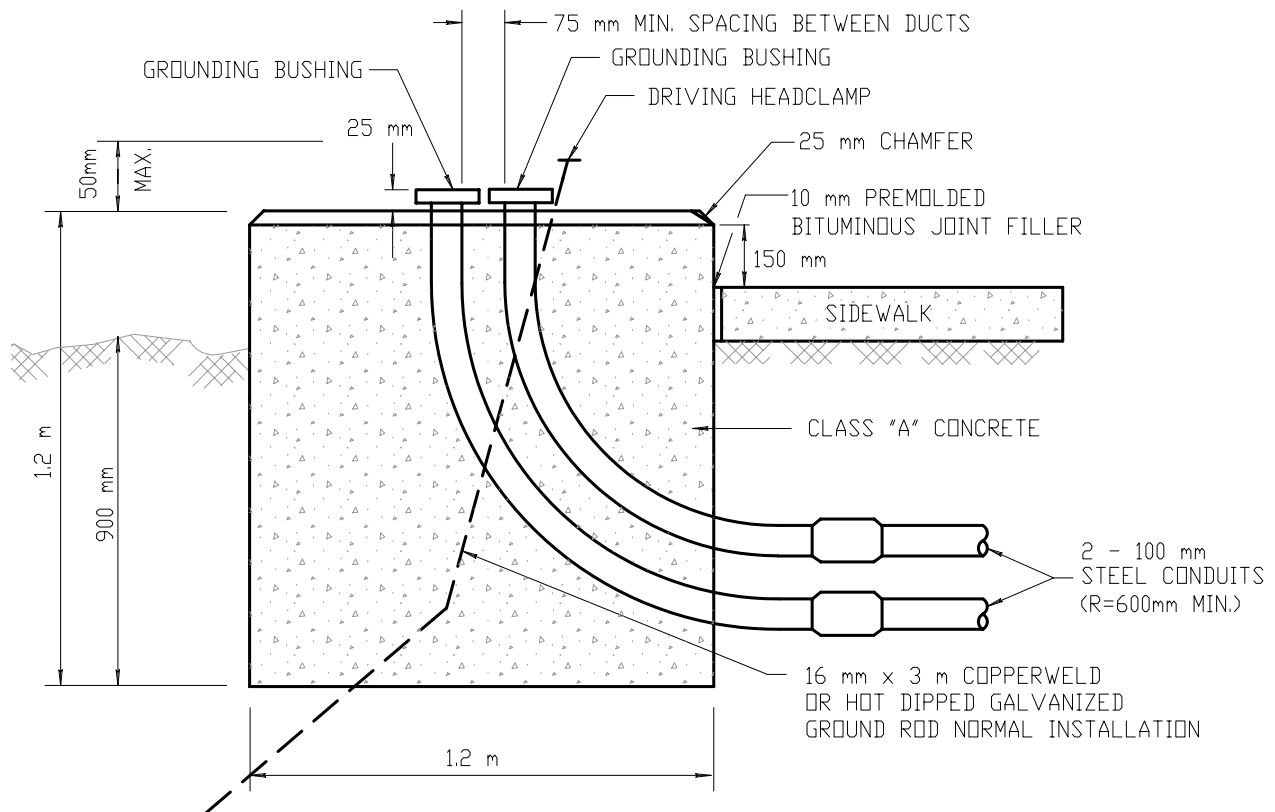

CONCRETE BASE FOR CONTROLLER - VIEW B

NOT TO SCALE

4/1/98

REVISED